



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

## Step by step tutorial: of Samsung Galaxy Note Edge Volume push buttons

For this tutorial you will need the following spared parts and tools that you cant get at our online store [Impextrom.com](http://Impextrom.com)  
Click on a tool for visit the website.



Head made of  
synthetic carbon steel  
with titanium handle

18,63 €



Opening tool  
Smartphone, tablet

2,19 €



Pinza antiestática  
ESD redondeada

3,06 €



Terminal opening  
tool, plastic

0,71 €



Special SAT 0.75mm  
high friction PVC pick

1,07 €



Smartphones and PC  
repair tool case

35,92 €

### Step 1 - Samsung Galaxy Note Edge

#### **Characteristics:**

**Dimensions:** 151.3 x 82.4 x 8.3 mm.

**Weight:** 174 grams.

**Display:** Super AMOLED of 5.6 inches. Quad HD (2,560 x 1,600).

**Memory:** 32/64 GB (microSD up to 128 GB). RAM: 3GB.

**Processor:** Qualcomm Snapdragon 805 2.7 GHz 4 cores. Adreno 440 GPU.

**Front camera :** 3.7 MP, 1440p @ 30fps.

**Rear camera:** 16 MP, 3456 x 4608 pixels, optical image stabilization, autofocus, LED flash.

**Battery:** 3000 mAh.

**Operating system:** Android 4.4



## Step 2 - Retirar Stylus

Before we start, we will remove the stylus.



## Step 3 - Remove back casing

Using a plastic opening tool, we will disengage the housing from the notches that hold it.

We must not forget to remove the SIM and SD cards before continuing dismantling.





#### Step 4 - Remove battery

With the opening tool we will lever the bottom of the battery to disengage it and thus be able to remove it.







### Step 5 - Remove intermediate housing

To remove the intermediate housing, first we will have to remove the 15 Phillips screws (PH # 0) that hold it. After removing the screws, with the help of a pick or other opening tool, we will unhook the housing from the notches that hold it.





## Step 6 - Disconnect components

To get to the handset, we will have to remove the motherboard beforehand. For this we will disconnect the components that, in turn, make it subject to this.

In this step we will disconnect the flexes from the screen and the front camera.







## Step 7 - Disconnect components

We continue disconnecting the components of the motherboard. Now we disconnect the antenna coaxial cables and the flex of the start button. To remove the plate, with the help of an opening tool, we will leverage the part shown in the images to disconnect it from the lower plate.







## Step 8 - Volume push buttons

Finally, we will detach the flex from the chassis pushbuttons and disengage it to remove it.





