



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of Huawei Ascend Mate 7 Bottom plate with charging connector and microphone

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



Professional Double
Plastic Device
Opening Tool

1,52 €



Opening tool
Smartphone, tablet

2,19 €



Anti-static tweezer
tips VETUS ESD-242

3,59 €



Assistant board for
Huawei Ascend Mate
7

2,22 €

Step 1 - Huawei Ascend Mate 7

Specifications :

Dimensions : 81 x 157 x 7.9 mm Weight. 185 g

SoC : Huawei HiSilicon KIRIN 925

Processor : 4x 1.8 GHz ARM Cortex-A15, 4x 1.3 GHz ARM Cortex-A7,

Number of cores : 8

Graphics processor: ARM Mali-T628 MP4, 600 MHz,

Number of cores: 4

RAM memory: 2 GB, 3 GB, 800 MHz Internal memory: 16 GB, 32 GB

Memory cards: microSD, microSDHC, microSDXC

Display: 6 in, IPS, 1080 x 1920 pixels, 24 bit

Battery : 4100 mAh, Li-Polymer (polymer lithium ion)

Operating system: Android 4.4.2 KitKat

Camera: 4160 x 3120 pixels, 1920 x 1080 pixels, 30 fps

SIM card: Micro-SIM

Wi-Fi: a, b, g, n, Wi-Fi Hotspot, Wi-R Direct

USB : 2.0, Micro USB

Bluetooth : 4.0

Location / Navigation : GPS, A-GPS, GLONASS

Before starting, make sure that the equipment is turned off.



Step 2 - SIM and SD cards

Remove the SIM and SD trays.





Step 3 - Back case

Peel off the lower bezel.



Step 4

Remove the 2 Phillips screws from the bottom.

Note that one of them is covered by a warranty seal sticker.



Step 5

The back cover carries the fingerprint reader. This has a flex cable connected to the motherboard that you need to disconnect when you separate the housing



Step 6 - Bottom plate with charging connector and microphone

Remove the 2 screws that hold the lower module.

Disconnect the interconnection flex and the lower end of the coaxial cable.

Separate the lower module.





Step 7

Finally, separate the bottom plate of the lower antenna module.



