






NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of Samsung Galaxy Trend Lite Tecla home

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.

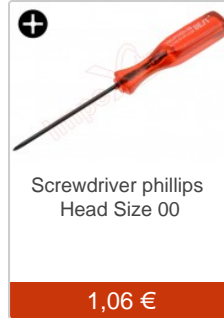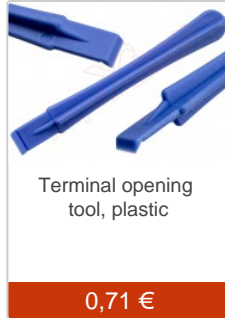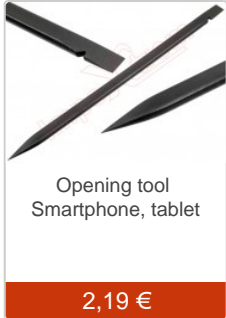

Step 1 - Back cover

Before starting make sure the phone is switched off.

Separate the back cover with the opening tool, thus avoiding damaging or scratching the equipment.



Step 2

Remove the back cover.



Step 3 - MicroSD card

Remove the microSD card by pulling it.



Step 4 - Battery

Remove the battery by pulling it from the top.



Step 5 - SIM card

Remove the SIM card by pushing it out with your finger.





Step 6 - Intermediate housing

Remove the 8 Phillips screws that hold the middle housing.



Step 7

Separate the intermediate housing with the opening tool.





Step 8

Separate the intermediate housing.



Step 9 - Motherboard

Disconnect the data cable from the display.



Step 10

Separate the base plate. This one does not have screws or glue.





Step 11 - Tecla home

Remove the home button releasing the side hooks.

