Step by step tutorial: of Peugeot Peugeot 206 (1998-2000)

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com Click on a tool for visit the website.



Step 1

Next we will show the steps to follow so that you can synchronize the control of the Peugeot 206 (1998-2000).







WWW.NADIEMELLAMAGALLINA.COM 1 of 3

Step 2 - Synchronization

To begin we will introduce the key in the lock of the vehicle, turn it to open it, remove the key and press and hold the buttons lock and unlock the command, and the led of the vehicle box will remain lit.





Step 3

Then we press the lock button or the unlock button, and the light will turn off.





Step 4

Now we enter the vehicle, we bring the command to the contact and press the lock or unlock button. We put contact, we wait 10 seconds, we remove contact, we wait 5 seconds, and the synchronization will be finished.

