

Step by step tutorial: of LG Nexus 5 Lower module (antenna and speaker)

For this tutorial you will need the following spared parts and tools that you cant get at our online store <u>Impextrom.com</u> Click on a tool for visit the website.



Step 1 - Back cover

Before starting make sure that the equipment is turned off.

With an opening tool release the hooks of the cover all around the contour.



WWW.NADIEMELLAMAGALLINA.COM

Step 2

The bottom of the lid has a line of glue.

Remove it with a pick.



Step 3

Separate the back cover.







WWW.NADIEMELLAMAGALLINA.COM

Release the hooks on the intermediate housing and remove it.







Step 5 - Battery

Disconnect and unfold the interconnection flex.







Step 6

Disconnect the battery cable.



The battery is attached to the chassis.

Remove it by prying it with the opening tool.

Do not deform the battery as it may damage it.







Step 8 - Lower module (antenna and speaker)

Remove the antenna module with loudspeaker.





