



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of Hisense Infinity Elegance (E76) Interconnection Flex

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



Head made of synthetic carbon steel with titanium handle

18,63 €



Set of 5 metal picks for opening

3,09 €



Pinza antiestática curva Baku ESD BK-15

3,50 €



Precision electric screwdriver POL-QB-3C

26,54 €



SIM card removal tool for all brands

1,61 €



Terminal opening tool, plastic

0,71 €



Set of professional tools for opening smartphones and tablets

18,97 €



Touch ESD glove, for antistatic protection, size M

4,16 €

Step 1 - Tray yes

To start we must extract the sim tray.






Step 2 - Back case

We remove the back cover, for this we will use a metal spike that we will insert between the frame of the screen and the back cover, when we manage to separate it we will have to disconnect the flex from the fingerprint reader.



Step 3 - Wifi antenna and shield

Remove the 5 Phillips screws (PH # 00) and remove the wifi antenna and the shield.

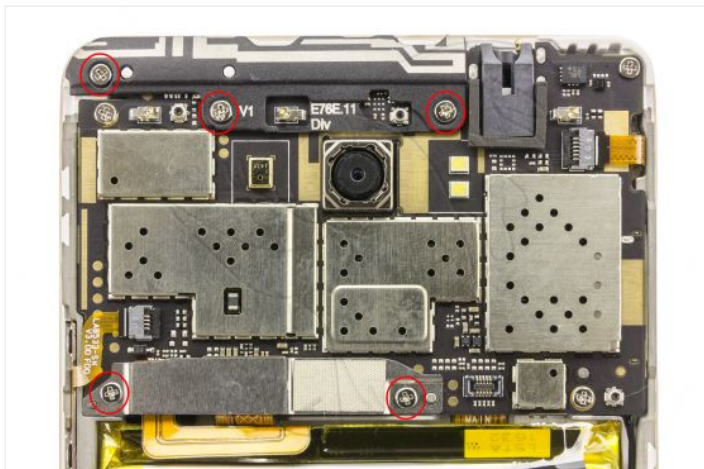



Step 4 - Components

We disconnect all the components of the motherboard and remove the base plate to be able to remove the base plate with greater comfort.



Step 5 - Motherboard

We lift the base plate and disconnect the interconnection flex and the coaxial cable from the back of the plate.

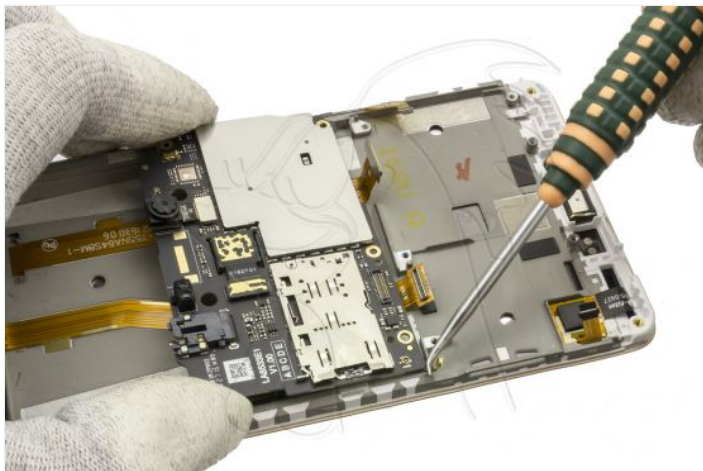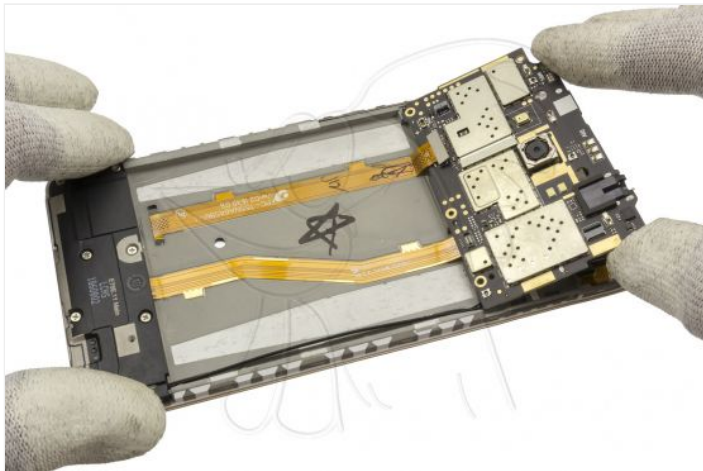

Step 6 - Interconnection Flex

We remove the 7 Phillips screws (PH # 00) to be able to remove the antenna module and speaker, and so we can take off and disconnect the broken interconnection flex.

