



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of Nokia 7 Plus Auxiliary plate

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



Set of 5 metal picks
for opening

3,09 €



Opening tool
Smartphone, tablet

2,19 €



Electrical dissipating
clamps, in blister

3,97 €



6-in-1 screwdriver, K-
8107 with different
heads, in blister

7,52 €



PREMIUM Auxiliary
boards with
components for
Nokia 7 Plus (TA-

5,91 €

Step 1 - Opening

Use the prong to separate the screen from the housing.







Step 2 - Extract screen

Remove the screw that covers the lid of the flex connection to remove it, with the opening tool release the connection of the flex.




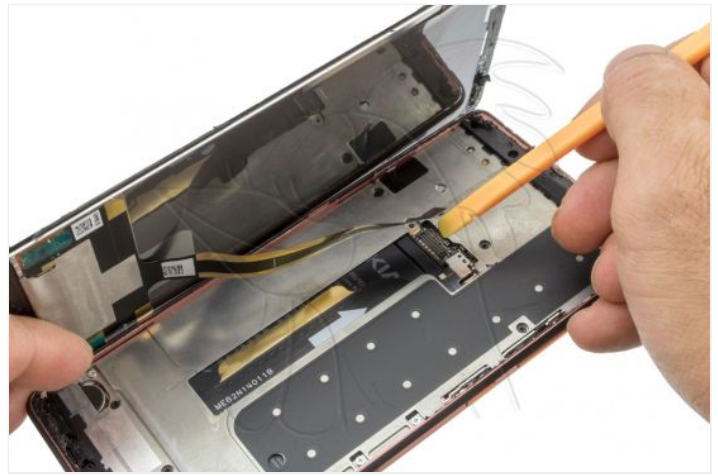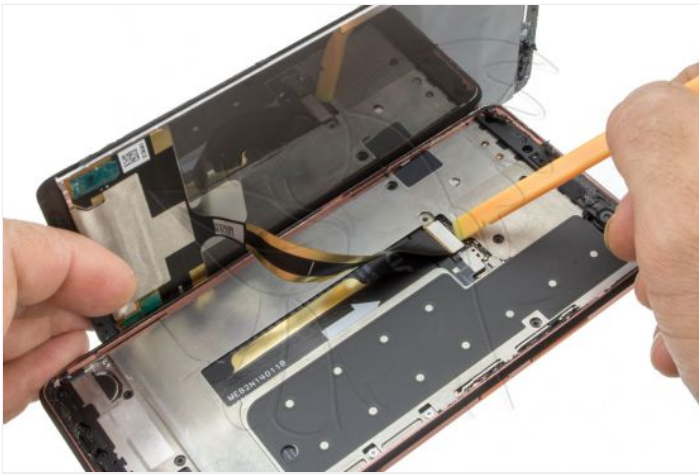

Step 3 - Remove chassis

Remove all screws and use the opening tool to remove the chassis.



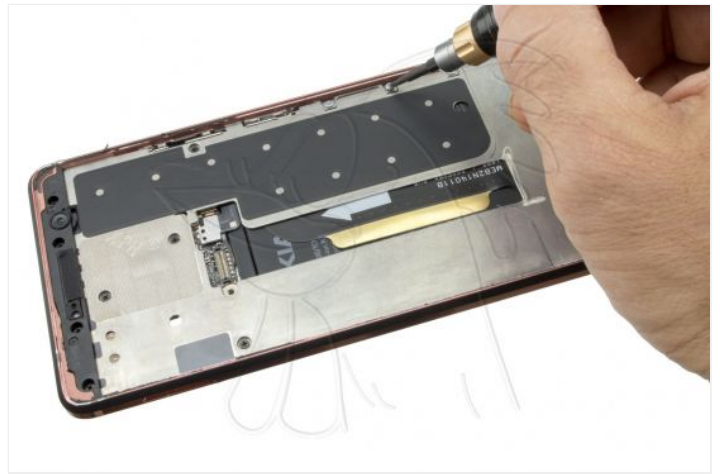

Step 4 - Remove battery

Unscrew and remove the connection cover. With the opening tool release the connection.



Step 5 - Extract speaker

With the opening tool disconnect the coaxial cable connection, and remove the speaker.





Step 6 - Remove auxiliary plate

Remove the vibrator with the forceps and remove the plate. Unscrew the flex connection and release it with the opening tool.

