



Step by step tutorial: of Alcatel 5 Motherboard

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



PX opening tool for smartphones and tablets

1,05 €



BK-7275 (A Version)
5 in 1 screwdriver

6,41 €

Step 1 - Opening

With the opening tool, release the upper and lower bezel of the housing and detach the rear housing.





Step 2 - Remove fingerprint reader

With the opening tool release the connection of the fingerprint reader and extract it.





Step 3 - Remove superior shield


Remove the 7 Phillips screws (PH # 00) that hold the shield and remove it with the opening tool.



Step 4 - Drop connections from the motherboard

With the opening tool release the connections of the motherboard.



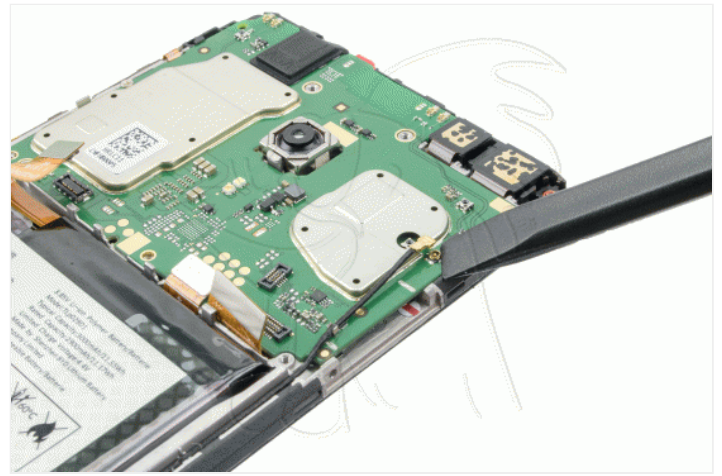

Step 5 - Remove motherboard

Loosen the two Phillips screws (PH # 00) that hold the plate and remove it with the opening tool.





Step 6 - Remove rear camera

With the opening tool release the connection of the rear camera and remove it.



Step 7 - Remove front angle camera

With the opening tool release the connection of the camera and remove it.

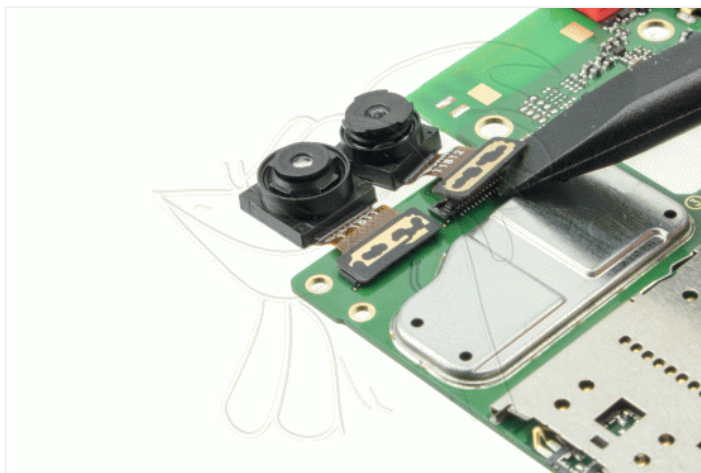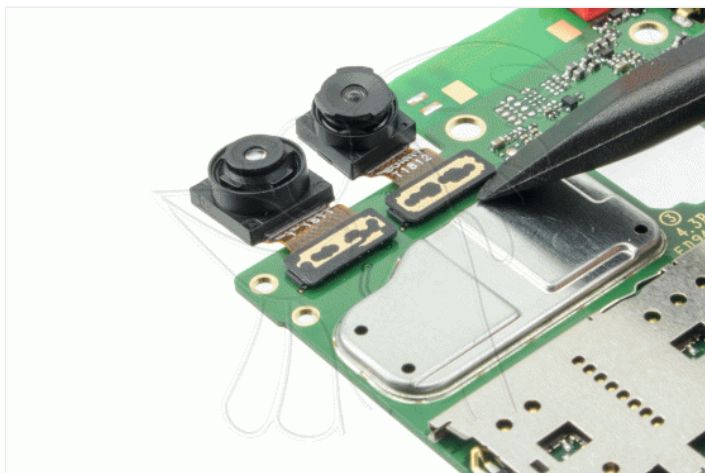

Step 8 - Remove front camera

With the opening tool release the connection of the camera and remove it.

