Step by step tutorial: of Energy Phone Max 3+ Auxiliary board

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com Click on a tool for visit the website.





Step 1 - Tray

First we have removed the card tray.





WWW.NADIEMELLAMAGALLINA.COM 1 of 6





Step 2 - Back case

We unhook the back cover with the help of a tool thin enough.







WWW.NADIEMELLAMAGALLINA.COM 2 of 6

We remove the six Phillips screws (PH # 00) that hold the upper intermediate housing, and with the help of a flat tool we will unhook it.









Step 4 - We disconnect battery

We disconnect the battery to work with greater security.





WWW.NADIEMELLAMAGALLINA.COM 3 of 6

Remove the six Phillips screws (PH # 00) that hold the lower intermediate housing, and with the help of a flat tool we will unhook it.









Step 6 - Auxiliary plate with components

We disconnect the coaxial cable, the fingerprint flex and the interconnection flex, take off the microphone and the vibrator, and we can take off the auxiliary plate.





WWW.NADIEMELLAMAGALLINA.COM













WWW.NADIEMELLAMAGALLINA.COM 5 of 6

Remove the microphone and the vibrator from the broken auxiliary plate.







