



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of Sony Xperia XZs Side push buttons and vibrator

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



Flex with vibrator and switch for Sony Xperia XZ/XZs, F8331, G8231

3,00 €



Heat-opening thermal mat, CPB320

69,61 €



Pinza antiestática curva Baku ESD BK-15

3,50 €



Opening tool Smartphone, tablet

2,19 €



Pinza antiestática ESD redondeada

3,06 €



Special SAT 0.70mm PET pick, high friction and resistance

1,25 €

Step 1 - Take off screen

We will start by removing the screen, for this we will warm it to about 60°C during a minute approximately.

With the hot screen, we will introduce a tine or another flat opening tool and move it around the contour to remove the adhesive.





Step 2 - Remove screen


To remove the screen, we will disconnect it from the bottom.





Step 3 - Remove armor

Remove the ten Phillips screws (PH # 00) that hold the shield, disconnect the battery and remove it.

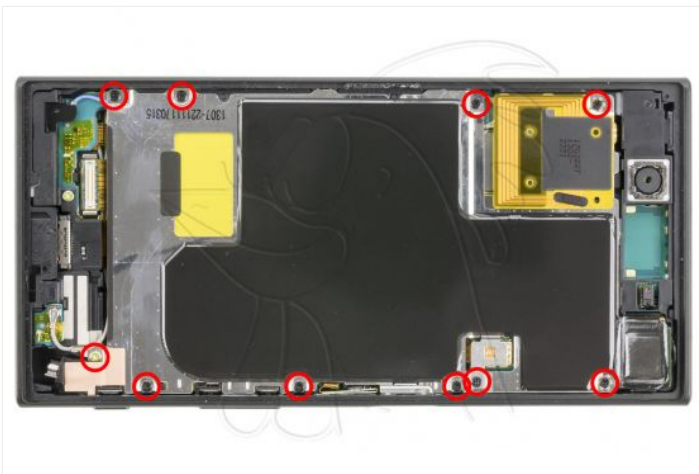



Step 4

Uncap the housing that covers the auxiliary plate and then disconnect the coaxial cable. Now, we will raise it to disconnect the interconnection flex.





Step 5 - Remove components

We disconnect the flex from the charging connector and disengage it. We take off the loudspeaker module and we will have to first remove the side antenna with coaxial cables as we will see in the next step.





Step 6 - Remove speaker module

Unlatch the side antenna and we can remove the speaker module.





Step 7 - Side push buttons and vibrator

To finish, we disconnected the flex from the base plate, we detached it from the chassis and we disengaged it.



