Step by step tutorial: of ZTE Blade A602 Frontal camera

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com Click on a tool for visit the website.



Step 1 - Back case

First of all we have to unhook and remove the back cover.









WWW.NADIEMELLAMAGALLINA.COM 1 of 3



Step 2 - Intermediate housing

We extract the eleven Phillips screws (PH # 00) that hold the intermediate housing and with the help of a tool with the flat tip, we will unhook the housing.









WWW.NADIEMELLAMAGALLINA.COM 2 of 3

We disconnect and remove the front camera that we have to replace.









WWW.NADIEMELLAMAGALLINA.COM 3 of 3