



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of Huawei P Smart Z Fingerprint reader

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



Opening tool
Smartphone, tablet

2,19 €



Special SAT 0.75mm
high friction PVC pick

1,07 €



Thermal opening mat
by heat, WL-1805

59,95 €

Step 1 - Back case



First of all we must apply heat to the casing to soften the adhesive that holds it, and with the help of a fine metal tool we will open a small hole through which we will introduce one or more plastic spikes, and thus it will be less likely to damage the casing.







Step 2 - Fingerprint reader

We peel off the adhesive that is above the connector and we can now disconnect the flex bridge from the fingerprint reader.

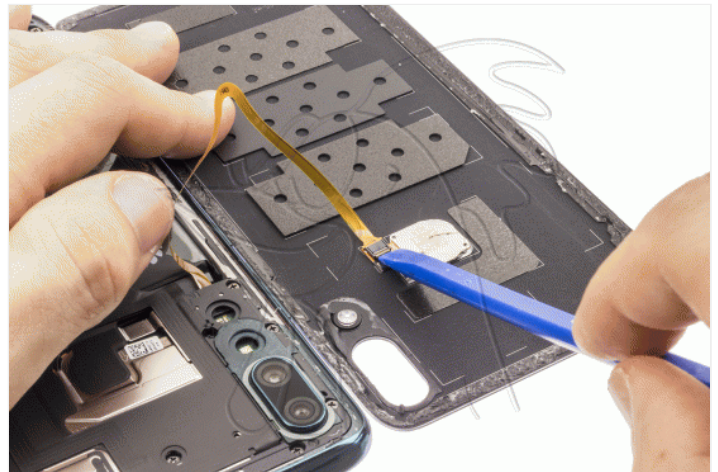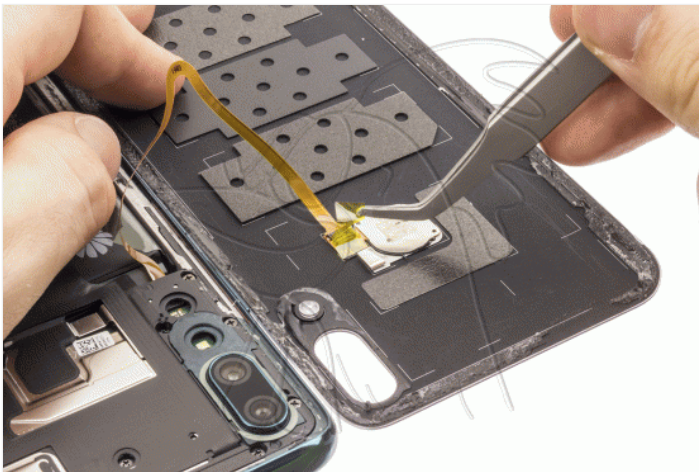

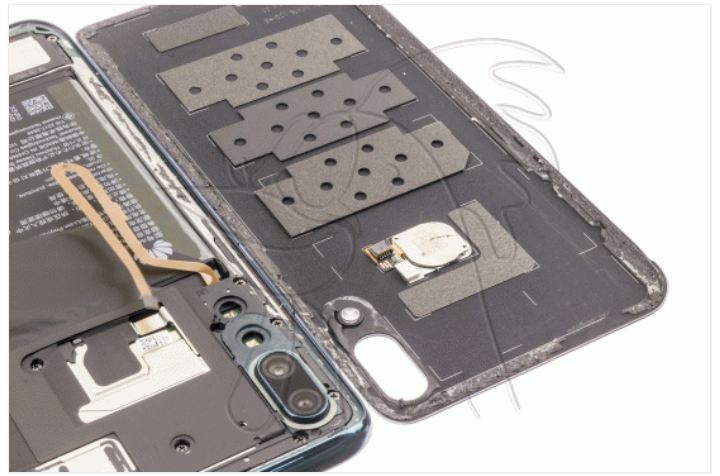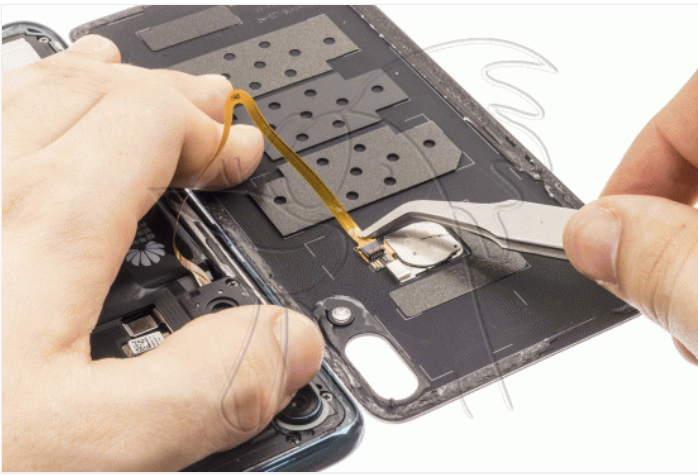

Step 3 - Fingerprint reader

Taking advantage of the heat that we have given to the back cover, we can now take off the fingerprint reader that we have to replace.

