



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of Realme Watch S Pro Pantalla completa

For this tutorial you will need the following spared parts and tools that you cant get at our online store [Impextrom.com](https://impextrom.com)
Click on a tool for visit the website.



Set of 5 metal picks for opening

3,09 €



Screwdrivers tool set BST-8927A

5,81 €



Opening tool Smartphone, tablet

2,19 €



Full screen Super AMOLED with black frame for Realme Watch S Pro,

25,88 €



39MM Professional Tip Tweezers, Super Fine Tips

5,50 €

Step 1 - Correas

Para empezar desengancharemos las correas para así trabajar sobre el smartwatch con una mayor comodidad.








Step 2 - Carcasa trasera

Retiramos los cuatro tornillos Pentalobe (TS1) que sujeta la carcasa, y con la ayuda de una púa metálica la desengancharemos.



Step 3 - Carcasa y pantalla

Extraemos el tornillo Phillips (PH#00) que sujeta el blindaje que cubre el conector del flex que une la carcasa trasera con la placa base, y ayudándonos de una herramienta de punta plana lo desenganchamos.

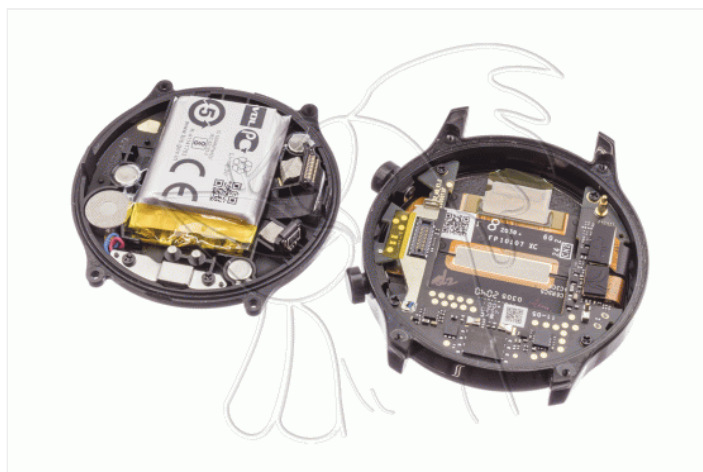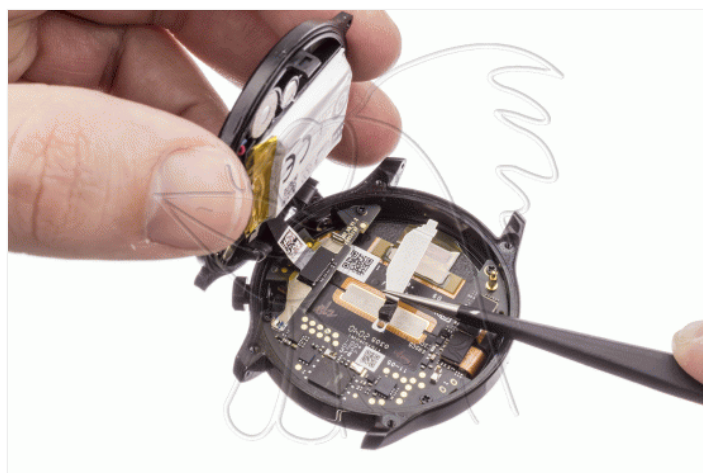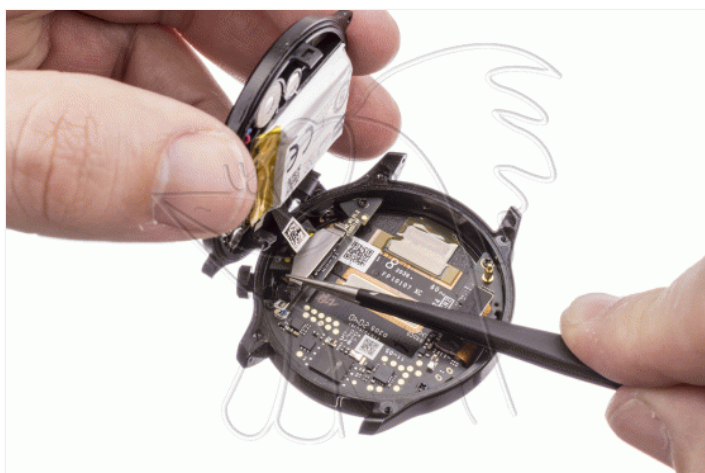

Step 4 - Pantalla completa

Desconectamos los dos conectores de la pantalla, extraemos los cuatro tornillos Phillips (PH#00) que sujetan la placa base, la retiramos con la ayuda de una herramienta plana, y ya podremos instalarla en la nueva pantalla con marco de la que dispongamos.

